

## **New Generation**

Deltec new generation 12.8V/25.6V Li-ion battery is intended as a replacement for the common 12V lead acid battery and traditional case Li-ion battery. The new generation Li-ion battery adopt removable enclosure and modular design which support to assembly in local. The new generation Li-ion battery adopt Iron Phosphate (LiFePO4) cells and unique BMS to provide safety, high current and prominent long life performance, with 20 times longer cyclic life than SLA battery to save cost and energy, up to 70% lighter than SLA battery to save logistic cost.



Diverse accessories which include Bluetooth modules, heater components, LED display units and communication ports. This document is intended for use by anyone required to install and operate new generation Li-ion batteries. Be sure to review this manual carefully to identify any potential safety risks before proceeding. The owner must be familiar with all the features of this product before proceeding. Failure to install or use this product as instructed can result in damage to the product that may not be covered under the limited warranty.

12.8V100Ah, 25.6V50Ah



### 12.8V200Ah, 12.8V300Ah, 25.6V100Ah, 25.6V200Ah





## **New Generation**

### WARNING: Explosion, Electrocution, Or Fire Hazard

- A battery can present a risk of electric shock, burns from high short circuit current, fire, or explosion.
- Observe proper precautions.
- Ensure the cables are properly sized.
- Ensure clearance requirements are strictly enforced around the batteries.
- Ensure the area around the batteries is well ventilated and clean of debris.
- Always use insulated tools. Avoid dropping tools onto batteries or other electrical parts.
- Never charge a frozen battery unless optional heater parts inside.
- If a battery must be removed, always remove the grounded terminal from the battery first.
- Make sure all devices are disconnected.

### **IMPORTANT:**

- When installing batteries, leave adequate clearance between batteries.
- When replacing batteries, use the same number and type of batteries.
- Avoid any fall or collision during the installation process.
- Do not remove the battery components. The maintenance of the battery should be carried out by a professional engineer.
- Do not expose the Li-ion battery to heat in excess of 58°C during operation, 60°C in storage.
- Do not incinerate or expose to open ames.
- Do not connect over 4 sets 12.8V or 2 sets 25.6VLi-ion batteries in series. Wrong • operation will damage the BMS.
- Before series connection, it's better to make sure fully charge or discharge single battery.
- The different SOC between batteries may cause the whole group to fail to charge and discharge normally (Reduce the usable capacity of the battery group.
- Before parallel connection, it's better to make sure the voltage difference less than 0.1V to avoid large current impact.
- Do not connect in series at the same time connect in parallel.

♀ Alrode	Cape Town	Pinetown	Rustenburg		
Deltec Energy Solutions	60 Marine Drive Paarden Eiland, Cape Town	116 Josiah Gumede Road Pinetown, Durban	229 Beyers Naude, CNR Brink and Beyers Naude Rustenburg		
6 Liebenberg Street, Alrode, Alberton, Johannesburg	📞 021 511 1001   🖂 sales@deltec.co.za	📞 031 702 4333   🖂 sales@deltec.co.za	📞 014 596 5926   🔀 sales@deltec.co.za		
South Africa	Port Elizabeth	Nelspruit	♀ George		
<b>C</b> 011 864 7930	39 Drury Street North End Port Elizabeth	Rapid Business Park, 10 Rapid Street Riverside, Nelspruit	112 Merriman Street George CBD, George		
🔀 sales@deltec.co.za	📞 021 511 1001   🖂 sales@dettec.co.za	📞 087 806 5876   🖂 sales@deltec.co.za	📞 044 001 0099   🔀 etienne@deltec.co.za		







## **New Generation**

### Storage

The 12.8V/25.6V Li-ion battery can be stored in an environment with temperatures between -20°C and +55°C and between 10% and 90% relative humidity, noncondensing. For long storage periods at 25°C, charge the battery every half years. For temperatures above 40°C, charge the battery quarterly. Do not store the Li-ion battery at temperatures above 60°C.

### **Relationship Between Charge Limits and Temperature**

Due to the chemistry of Lithium Ion cells, the cells cannot accept as much charge current at lower temperatures without risking permanent loss of capacity. As the cells' temperature rises during the charging process, they can gradually accept higher currents. To maintain optimum performance and durability of Li-ion battery, the following charge limits based on ambient temperature is recommended.

Temperature (°C)	Max. Charge Current				
-20	Prohibit charging				
-10	Prohibit charging				
0	0.1C				
10	Recommended charge current				
20	Max. continuous charge current				
35	Recommended charge current				
45	0.2C				
>55	Prohibit charging				

Table 3 Charge Rate by Temperature

### **Series Strings**

The batteries can be combined together in series strings to achieve higher operating voltages by connecting the positive terminal of one battery to the negative terminal of the next battery. The maximum number of 12.8V Li-ion battery that you can connect in a series is four. The maximum number of 25.6V Li-ion battery that you can connect in a series is two. Below figure 2 illustrates four 12.8V Li-ion batteries connected in series, for a 4S1P configuration.





## **New Generation**



Figure 2. Connecting Batteries in Series (4S1P Configuration)

Two batteries in series:  $2 \times 12.8V = 25.6V$  (nominal) for 24V applications. Three batteries in series:  $3 \times 12.8V = 38.4V$  (nominal) for 36V applications. Four batteries in series:  $4 \times 12.8V = 51.2V$  (nominal) for 48V applications.

### CAUTION:



- Do not connect more than four batteries in series. Connecting more than four batteries in series exceeds the voltage limit of the BMS.
- Do not short circuit the Li-ion battery
- Do not connect different batches, different types, old and new batteries in series.
- Ensure the batteries consistency before connecting in series.
- For series connection, if one of batteries is charged fully (100% SOC), the other batteries will not be charged anymore, this may cause some batteries SOC won't show 100%, it don't effect the performance of battery.

### Parallel String:

You can combine batteries together in parallel strings to achieve higher operating energy by connecting like-polarity terminals of adjacent batteries. To combine batteries in parallel strings, connect all like-polarity wires on adjacent batteries to an appropriately sized terminal block for your application. Refer to Figure 3 for an example of four 12.8V Li-ion batteries connected in parallel.



Λ



**New Generation** 



### CAUTION:

Do not connect different batches, different types, old and new batteries in parallel. Ensure the battery voltage difference is below 100mV before parallel connection to avoid

- high pulse current.
- Ensure every battery have 3A charge/discharge current. The parallel application can only extend the working time, and cannot increase the charging or discharging current.

### **Charging Batteries:**

The 12.8V Li-ion is compatible with common 12V Lead-acid battery chargers. Chargers that require the detection of voltage at the battery terminals to charge may fail to wake the Li-ion battery from a state of under-voltage protection. Constant Voltage (CV) chargers may result in an inrush of current due to the low impedance of the cells, interrupting the charge. Reset the charger and continue charging normally if the charger trips. The constant current (CC) chargers is recommended strongly. To charge a single 12.8V battery, the maximum charge voltage is 14.6V and the maximum charge current is refer to Table 1. Any inrush current may cause over current or short circuit protection. Once you reach end-of-charge voltage, apply a constant voltage hold at this voltage until the current decays to almost zero. This charges the cells to 100% state of charge (SOC). Refer to below figure for an illustration.



Deltec Energy Solutions, a member of the Hudaco group. Reg No. 1984/005432/07



## **New Generation**



Battery Voltage and Current During Charge

#### Note:

For 12.8V Li-ion battery, the minimum charging voltage is 13.7V, otherwise the battery will not be fully charged.

### **ON/OFF Button and LED Indication for G2, G3**

For new generation Li-ion battery, if there are no charge or discharge for 24 hours, the battery will enter sleep mode to save energy and it can still be measured a OCV (>10V), any charge or discharge operation will active the battery. If the battery was over-discharged protection, the BMS will enter sleep mode after 5 min. there are no OCV at this status. only charge operation can active the battery. For G2 and G3 series. it can also support to press ON/OFF button 6 seconds to active or switch off a battery.





## **New Generation**



ON/OFF button and LED indicators for G2 and G3

Status	Nominal Warning Protection	RUN	ALM	SOC			Description	
Shut down	Dormancy	OFF	OFF	OFF	OFF	OFF	OFF	
Nominal		Flash 1	OFF	-			Standby	
Standby	Flash 1	Flash 3	FC	now moau	lie capacity	Module at low voltage		
	Nominal	ON	OFF	F		ula aanaait		
	Warning	ON	Flash 3	F	bilow moat	ne capacit		
Charge	Over-charge Protection	ON	OFF	ON	ON	ON	ON	LED turn to standby if no power supply
	Temperature, over-current, Failure protection	OFF	OFF	OFF	OFF	OFF	OFF	Stop charging
	Nominal	ON	OFF	E		ula conceit		
	Warning	ON	Flash 3	F	mow mout	ne capacit		
Discharge	Under voltage Protection	OFF	OFF	OFF	OFF	OFF	OFF	Stop discharging
	Temperature, over-current, short circuit, failure protection	OFF	ON	OFF	FF OFF OFF OFF Stop disch		Stop discharging	
Failure		OFF	ON	OFF	OFF	OFF	OFF	Stop charging and discharging

Note:

Flash 1: light 0.25s/off 3.75s; Flash 2: light 0.5s/ off 0.5s; Flash 3: light 0.5s / off 1.5s

💡 Cape Town



Deltec Energy Solutions 6 Liebenberg Street, Alrode, Alberton, Johannesburg South Africa

📞 011 864 7930

🖂 sales@deltec.co.za

60 Marine Drive 116 Josiah Gumede Road Paarden Eiland, Cape Town Pinetown, Durban 📞 021 511 1001 | 🖂 sales@deltec.co.za 📞 031 702 4333 | 🖂 sales@deltec.co.za Port Elizabeth Nelspruit Rapid Business Park, 10 Rapid Street 39 Drury Street North End Port Elizabeth Riverside, Nelspruit 📞 021 511 1001 | 🖂 sales@deltec.co.za

€ 087 806 5876 | ⊠ sales@deltec.co.za

Pinetown

Rustenburg 229 Beyers Naude, CNR Brink and Beyers Naude Rustenburg 📞 014 596 5926 | 🖂 sales@deltec.co.za

9 George 112 Merriman Street George CBD, George

€ 044 001 0099 | ⊠ etienne@deltec.co.za



**New Generation** 

## **Communication Port for G3**



UP					
PIN	Description				
1	LED -				
2	O/F/LED+				
3	O/F				
4	CAN H				
5	CAN L				
6	COMG				
7	RS485-A				
8	RS485-B				

DOWN						
PIN	Description					
1	/					
2	SWB					
3	SWA					
4	CAN H					
5	CAN L					
6	COMG					
7	RS485-A					
8	RS485-B					

### Note :

1. For parallel connection, it supports to do communication between batteries.





## **New Generation**

#### **Communication Connection:**

The battery BMS default ADD is 0, if the battery needs to do communication with inverter or there are 2 or more batteries connect in parallel. it needs set ADD. The below accessories is necessary for communication setting and connection







Communication cable-586B,CAT5e, 1m

CAN terminal resistor for parallel communication (Blue color, PIN4-PIN5 120 Ohm resistor)

Automatic coding parts for parallel batteries ADD automatic coding (Gray color, PIN2-PIN3 short together)

**Optional Part** RS485-USB device Only for install engineer and after-sale engineer.

Step 1. Connect the power cable between batteries. Make sure the screws are tight. Step 2. Connect communication cable batteries and CAN terminal resistor.



Step 3. Press ON/OFF button 6s to active all batteries. the battery SOC indicator will on. Step 4. Insert automatic coding parts to BAT-1 UP port. the BAT-1 RUN & ALARM LED will start to flash at the same time which means the BMS start setting ADD automatically. Finally, all LED indicators will become normal which means the BMS ADD coding process is complete. Step 5: Remove automatic coding parts and connect RS485-USB cable to PC, it can monitor every battery information by BMS PC software. or connect BAT-1 UP port to inverter.





**New Generation** 

### BMS PC software operation:

**Alrode** 

South Africa

📞 011 864 7930

This chapter mainly introduce the BMS PC software operation for G3 series. BMS PC software download: http://120.27.63.138:8181/attach files/vrla case 12/112



Double click BMSTools.exe to open the software.

Check the battery ADD, USB series Port and band rate-9600, click "connect". If the communication is normal, the battery realtime information will be listed.

														- 🗆
RealTimeMonitori	ing ParameterSett	ing System Settings	Inverter Proto	col Settings	s Logs H	lelp			Serial Pr	ort				
0 1	2 3	4 5	6 7	8	9 10	11 12	13 14 15	5 Auto	Port Baud Rate	COM5 9600	~	Refresh Connect	Interval (S)	0.5 ~ Save
Dook Informat	llan				Transform	101				E				
Pack Current	0.0	A Remain'Capacity	6.3	Ah	MaxTemp	29.0	1 Min Tomp	28.4	3	Equilib	mum —			
Dest Malterer	12.0	V. E.I. Ownerity	20.0		Maxiomp	20.0	i wiin temp	20.4		Ce	ell V1	OFF	Cell V9	OFF
Pack Voltage	13.2	<ul> <li>Full Capacity</li> </ul>	30.0	Ah	Temp 1	28.9	Temp 4	0		Ce	ell V2	OFF	Cell V10	OFF
SOC	21.0	% Rated Capacity	30.0	Ah	Temp 2	0	MOS Temp	29.2			all 1/2	OFF	0.11144	OFF
SOH	100.0	% Battery Cycle	1		Temp 3	0	Env Temp	31.0			en vo	UFF	Cell VII	UFF
Cell Voltage (n	nV)				Alarm Status					Ce	ell V4	OFF	Cell V12	OFF
Cell V1	3252	Cell V9	0		No Alarm					ן כי	ell V5	OFF	Cell V13	OFF
		0.111/10								Ce	ell V6	OFF	Cell V14	OFF
Cell V2	3233	Cell V10	0								ell V7	OFF	Coll V15	OFF
Cell V3	3252	Cell V11	0									011	Cell V15	OFF
Cell V4	3251	Cell V12	0		Protect Status	;						OFF	Cell V 16	OFF
Cell V5	0	Cell V13	0		No Protect					SwitchS	Status -			
											PACK S	TATU	STANDBY	
Cell V6	U	Cell V14	0								CHG	vios	ON	
Cell V7	0	Cell V15	0										ON	
Cell V8	0	Cell V16	0		Fault Status						DSG	MOS	UN	
MaxVolt	3252	1 MinVolt	3233	2	No Fault						LIMIT	MOS	OFF	
										н	EATIN	G MOS	OFF	
VoltDif	19										DRY C	ONN1	OFF	
											DRY C	DNN2	OFF	
Communicatio	on Normal	Password 1		Login	LIMIT MC	S Connect	Disconnect	F	orced		PRE I	MOS	OFF	





**New Generation** 

Click "Read", the BMS default parameter will be list. any modify about BMS parameters should be carried out by a professional engineer.

Wrong parameters setting will cause the damage about BMS or battery.

BMSTool			- 🗆 ×
RealTimeMonitoring ParameterSetting System Settings Inverter Protoco	l Settings Logs Help		
Clear Deselect/II	Write Stop	Read Clear	Restore
Pack OV Alarm Protect         Pack OV Alarm (V)         Pack OV Protect (V)         Pack OVP Release (V)         Pack OVP Delay Time (mS)         CHG OC Alarm Protect         CHG OC Alarm (A)         CHG OC Protect (A)         CHG OC Delay Time (mS)	Cell OV Alarm Protect           Cell OV Alarm (V)           Cell OV Protect (V)           Cell OVP Release (V)           CHG OT Alarm Protect           CHG OT Protect (°C)           CHG OTP Release (°C)	Pack UV Alarm Protect Pack UV Alarm (V) Pack UV Protect (V) Pack UVP Release (V) Pack UVP Release (V) Pack UVP Delay Time (mS) DSG OT Alarm Protect DSG OT Alarm (rt) DSG OT Protect ("C) DSG OT Protect ("C)	Cell UV Alarm Protect           Cell UV Alarm (V)           Cell UV Protect (V)           Cell UP Protect (V)           Cell UP Delay Time (mS)           CHG UT Alarm Protect           CHG UT Protect (°C)           CHG UT Protect (°C)
DSG OC Alarm Protect           DSG OC Alarm (A)           DSG OC 1 Protect (A)           DSG OC 1 Protect (A)           DSG OC 2 Protect (A)           DSG OC 2 Delay Time (mS)           BMS Version           Model SN           PACK SN	DHG UT Alarm Protect         DHG UT Alarm (°C)         DHG UT Protect (°C)         DHG UTP Release (°C)         ENV UT Alarm (°C)         ENV UT Protect (°C)         ENV UT Protect (°C)         ENV UTP Release (°C)	MOS OT Alarm Protect MOS OT Alarm (*C) MOS OT Protect (*C) MOS OT Protect (*C) Balance Threhold (mV) Balance AVcell (mV)	ENV OT Alarm Protect           ENV OT Alarm (°C)           ENV OT Protect (°C)           ENV OTP Release (°C)           Sleep Vcell (V)           Delay Time (s)           SOC Low Alarm (%)
2021-12-22 09:09:10			





## **New Generation**

### **Bluetooth battery APP introduction**

This chapter manily introduce the bluetooth battery APP For IOS device, it can search Bluetooth Li at App Store. For Android device, it can scan below QR code to download APP.







Note :

1. Bluetooth module is optional parts for new generation Li-ion battery.





## **New Generation**

### Troubleshooting

The 12V / 24V Li-ion batteries are extremely reliable batteries that provide greater useful life than comparable 12V lead-acid batteries. Despite the high reliability of the 12V/24V Li-ion batteries, you may encounter situations where the battery does not operate as expected. These situations are typically the result of misuse, abuse or a non-optimal operating or storage environment. This part details potential issues you may encounterwith the 12V / 24V Li-ion batteries and the appropriate troubleshooting procedures.

### **Charger Trips using Constant Voltage**

Problem : CV charger trips when charging the batteries. This is due to the low impedance of the battery creating a current inrush.

Solution: Reset the charger and try again.

### **Terminal Voltage Absent or Low**

Problem :

Using a multimeter to check terminal voltage shows the terminal voltage is low. Possible causes for this problem are:

The voltage of a cell within the battery dropped below 2 V, causing the microprocessor to enable under-voltage protection.

The battery's SOC dropped below 5% from either an extended idle period or heavy use, enabling under-voltage protection.

The battery overheated, causing the microprocessor to enable over-temperature protection.

### Solution:

To resolve situations where terminal voltage is absent or low:

1.Allow the battery to cool and then recheck terminal voltage.

2. Connect the battery to a charger to wake the battery and recover terminal voltage.

Depending on the battery's voltage and state of balance it may take up to 48 hours to completely charge and balance the battery.





## **New Generation**

### **Battery Current Disappears when Charging**

#### Problem :

Battery current disappears when charging. Possible causes for this problem are: The battery overheated, enabling over-temperature protection. The battery pack is out-of-balance. Charger voltage is too high.

#### Solution:

To resolve situations where current disappears when charging:

1.Allow the battery to cool.

2.Apply a 14.0 V charge voltage for 48 hours to balance the battery pack's cells.

3.Reduce charger voltage to 14.4 V or less.

#### **Alrode**

Deltec Energy Solutions 6 Liebenberg Street, Alrode, Alberton, Johannesburg South Africa

**6** 011 864 7930

🖂 sales@deltec.co.za

💡 Cape Town

60 Marine Drive Paarden Eiland, Cape Town

€ 021 511 1001 | ⊠ sales@deltec.co.za

Port Elizabeth
 39 Drury Street North End
 Port Elizabeth

📞 021 511 1001 | 🖂 sales@deltec.co.za

Pinetown
 116 Josiah Gumede Road
 Pinetown, Durban
 031 702 4333 | Xales@deltec.co.za

Nelspruit Rapid Business Park, 10 Rapid Street Riverside, Nelspruit

€ 087 806 5876 | ⊠ sales@deltec.co.za

George 112 Merriman Street George CBD, George

Rustenburg

Rustenburg

€ 044 001 0099 | ⊠ etienne@deltec.co.za

229 Beyers Naude, CNR Brink and Beyers Naude

📞 014 596 5926 | 🖂 sales@deltec.co.za

Deltec Energy Solutions, a member of the Hudaco group. Reg No. 1984/005432/07